

Screen Window Installation Instructions

Please read the following measuring instructions carefully. We are unable to accept responsibility for products that have not being measured or installed.

Parts supplied

- 1 Screen housing
- 2 side tracks



Recess Frame

Remove bracket side cover to expose screw.

Position the housing at the top of the window frame.




As per picture using the side holes on the fixing bracket, place the first screw all the way in until its flat against the bracket.




THANK YOU FOR SHOPPING WITH US
WWW.BESTBLINDS.CO.NZ

Slide the tracks into position under the side brackets. It should lock in perfectly.

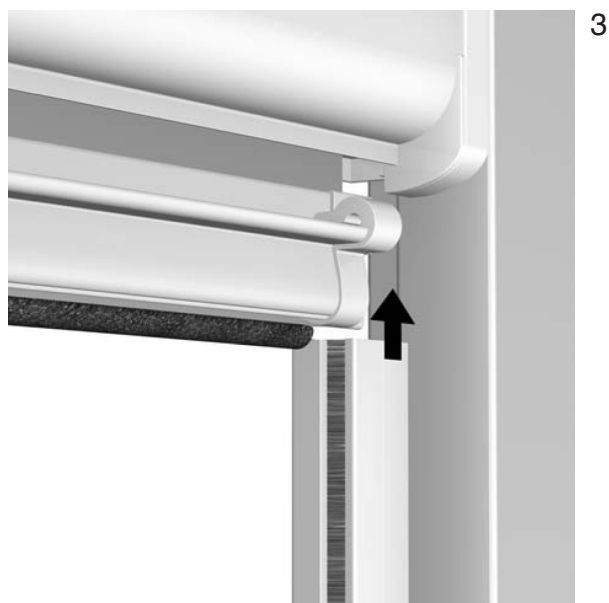

Fix the side tracks as per picture. Use a screw driver narrow enough to allow you to screw all the way in the track, the head of the screw must be flat with the back of the track.

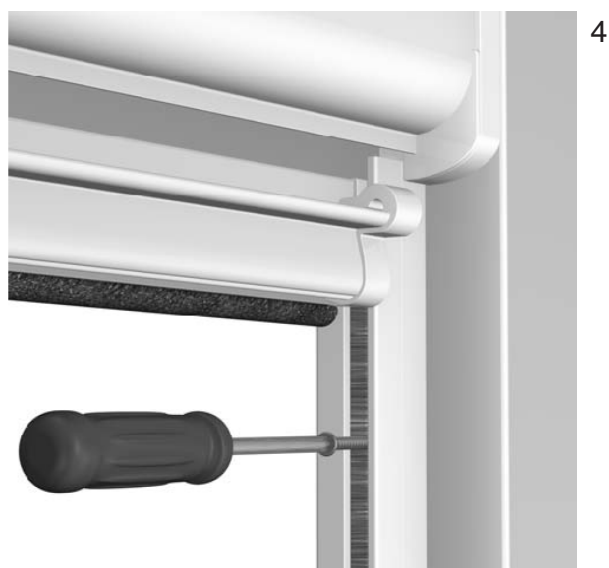

THANK YOU FOR SHOPPING WITH US
WWW.BESTBLINDS.CO.NZ

Exact Frame

Position the housing at the top face of the window frame exact where you have measured.

Using the hole on the face of the fixing bracket place your first screw as per picture.




Slide the tracks into position under the side brackets. It should lock in perfectly.



Remove all the plastic covers on the side tracks to expose hole.

Fix all the screws on the face of the side tracks.

Remember to place all the plastic covers back.

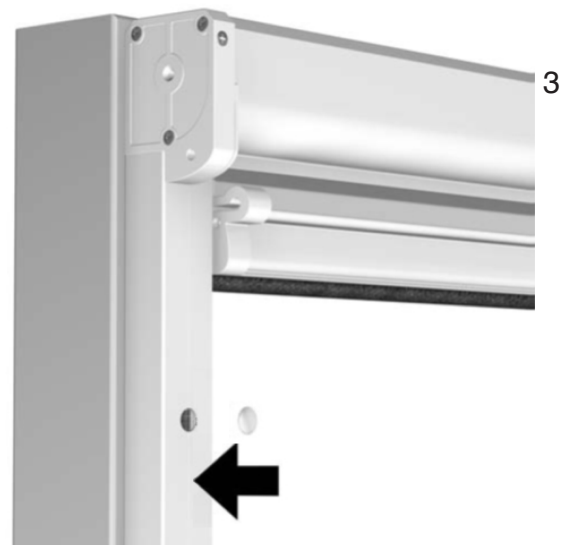

THANK YOU FOR SHOPPING WITH US
WWW.BESTBLINDS.CO.NZ