

Venetian Blind

Installation Instructions

Please read the following installation and operating instructions carefully. We are unable to accept responsibility for products that have not been installed or operated correctly.

For this installation will need a pencil, drill, screwdriver, pliers, and appropriate fasteners.

Please be aware that the end positions are essential and extra brackets will be supplied if the blinds surpass a certain width.

Step 1 . Choose The Correct Fasteners For Installation

Wooden screws are included. Alternative fasteners should be used for aluminum or concrete installations (Not Included with Blinds)

- For wallboard or plaster: Use the provided hollow wall anchors for added support. For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws.
- For metal surfaces: Pre-drill holes and use and appropriate anchors before fastening the screws.


Step 2: Mark the Bracket Locations

- Make sure that the position of the brackets is such that the venetian blind does not come into contact with protruding parts, such as window or door handles, window sills etc.
- Installation brackets must be level for proper operation.

The brackets are universal so they can be used for: wall mounting or ceiling.

Position the brackets in such way that they will not interfere with components in the headbox.

Please be aware that the end positions are essential and extra brackets will be supplied if the blinds surpass a certain width and must be positioned evenly along the headbox.

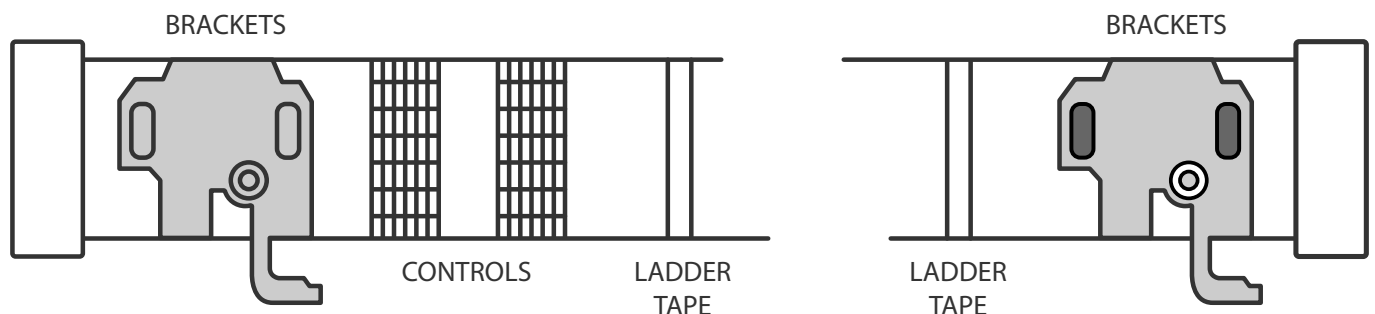


THANK YOU FOR SHOPPING WITH US

WWW.BESTBLINDS.CO.NZ

Step 3. Fixing The Brackets


Position the bracket accordingly so that the swing arm is facing you and mark where the holes are positioned.

Mark the position of the first bracket, drill holes on the marks and fix the brackets in place. Repeat the process with the remaining brackets.

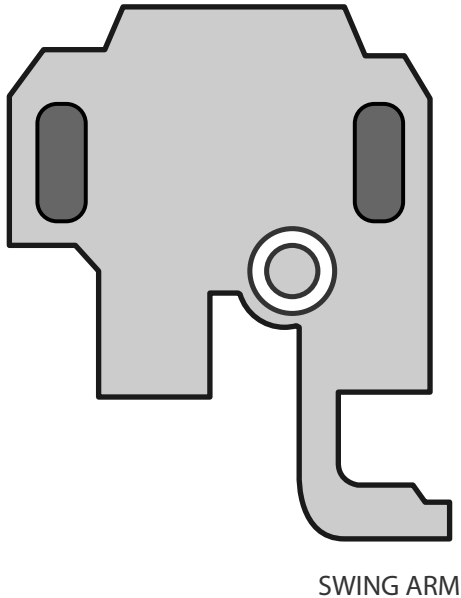

Step 4. Placing The Blind

Pull the swing arm of the bracket counterclockwise to open and ease the front lip of the headrail into place before attaching the blind over the bracket. (A)

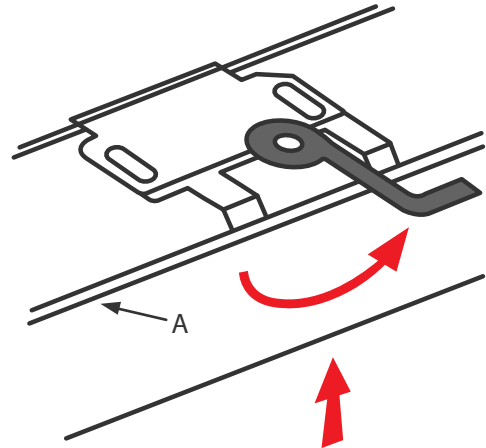

Push the swing arm clockwise to lock firmly while holding the headrail fixedly.

