# Vertical Blino

# **Installation Instructions**

Please read the following installation and operating instructions carefully. We are unable to accept responsibility for products that have not been installed or operated correctly.

For this installation will need a pencil, drill, screwdriver, pliers, and appropriate fasteners.

#### **Choose The Correct Fasteners For Installation**

Wooden screws are included. Alternative fasteners should be used for aluminum or concrete installations (Not Included with Blinds)

- For wallboard or plaster: Use hollow wall anchors for added support. For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws
- For metal surfaces: Pre-drill holes and use and appropriate anchors before fastening the screws.

#### **Recess Fit Bracket**



Mounting brackets

Quantity: 2 or more depending


on width of blind

Exact Fit L Shape Extension



#### **RECESS**

Position the brackets on the mounting surface, approximately 150mm in from each end of the track position,

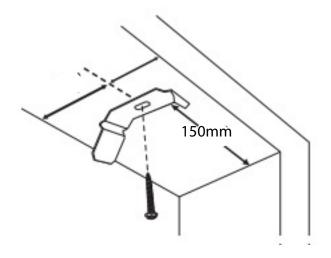


THANK YOU FOR SHOPPING WITH US

WWW.BESTBLINDS.CO.NZ


## **EXACT FITTING (EXTENSION BRACKET)**

Position the brackets on the mounting surface, approximately 150mm in from each end of the track position,

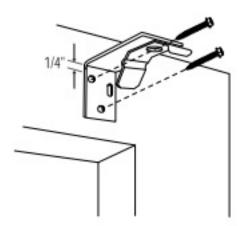


#### FITTING THE TRACK TO THE BRACKETS


- 1. Insert the front part of the bracket inside the top front groove of the track (Fig. A).
- 2. Push the back up so it snaps into the bracket (Fig. B).

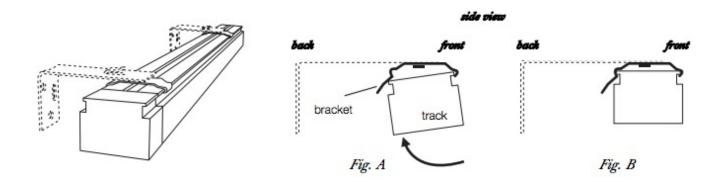


## PLACING THE BLADES TO THE TRACK

- 1. Before installing the vanes, make sure the carriers are positioned as in Fig. A.
- 2. Insert the vanes into the carriers. Make sure all the vanes are facing the same direction (Fig. B or C).

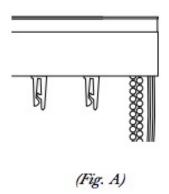

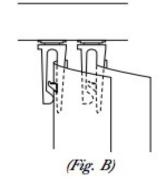

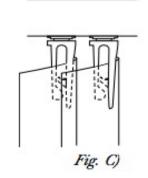

To remove the vanes, first rotate the carriers to the open position as illustrated here. Then slide a card between the vane and carrier clip to open the carrier sufficiently and remove the vane (Fig. D).

