


## Inside Frame




Drill screw holes in the vertical frame if not pre drilled  
Screw in place with supplied screws


## Outside Frame

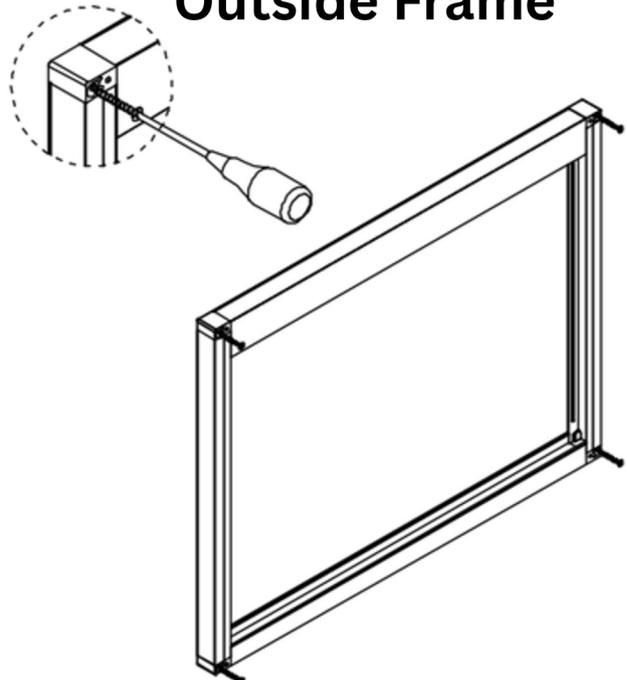

For outside frame installation screw through the 4 corners.

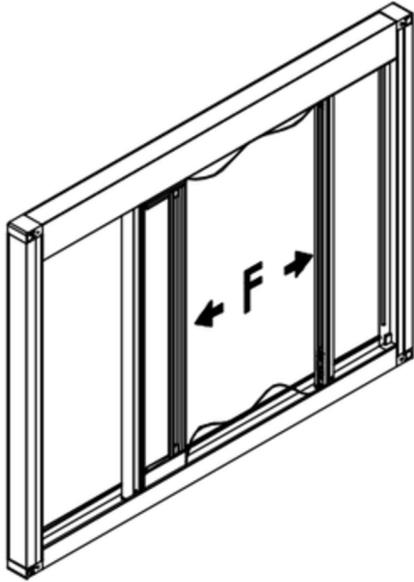


Press PVC Strip firmly against the vertical frame to clip lock it in place.

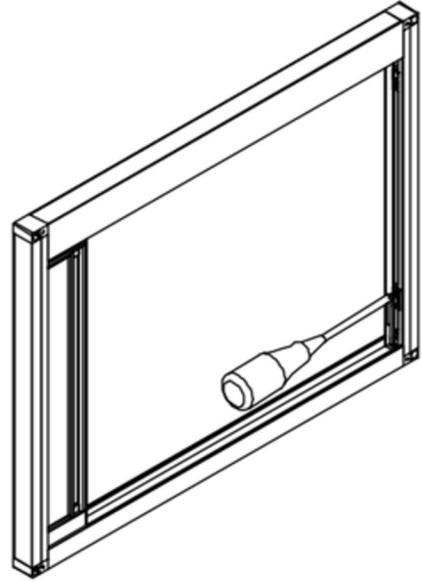


Adjust cord tension by sliding up and down and screw to lock.


\*cord should be tensioned just enough to sit flat - not loose.

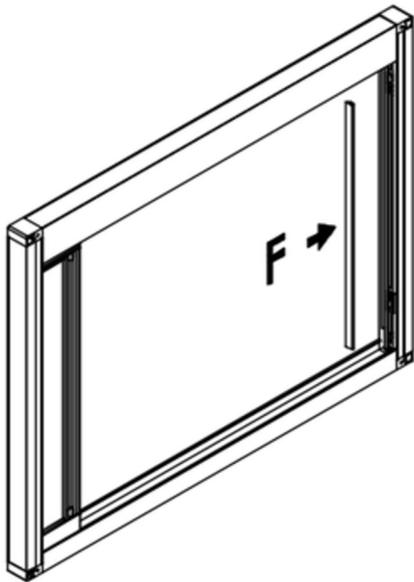

Place magnetic strip by pressing it against the vertical PVC strip.

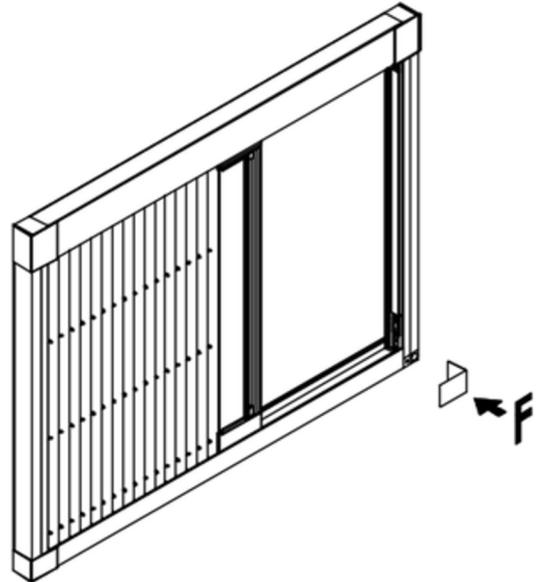

Place corner covers to hide screw hole.

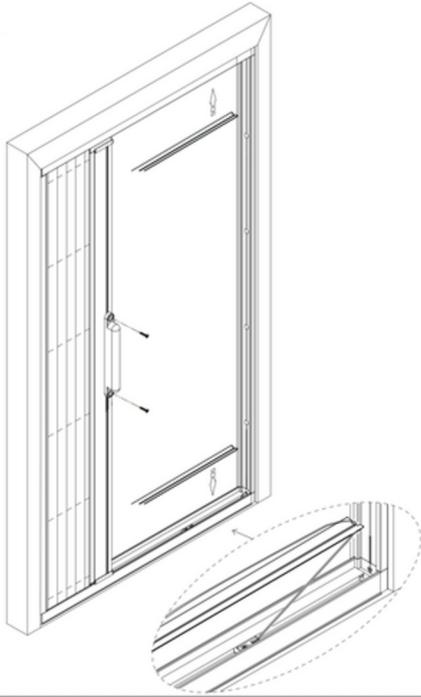

---

Place cover strips and finish with handles.

Steps for installation may vary if installing on brick or aluminium which may require alternative screws or anchors which are not supplied.

[Watch steps here.](#)

