


Assembly Steps 1 & 2 are not required (factory default)


Step - 1

Assembling end caps with cassette
Adjust spring tension through hexagon hole

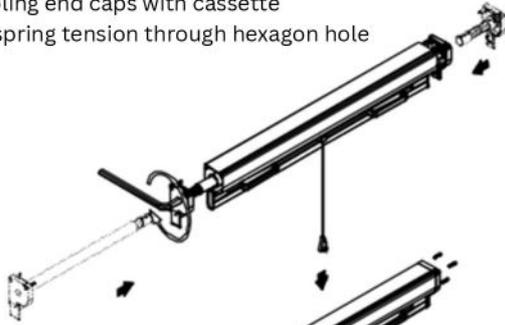


Step - 2

Screw end caps

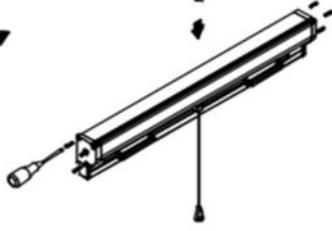


Step - 3

Connect side channels and secure with screw

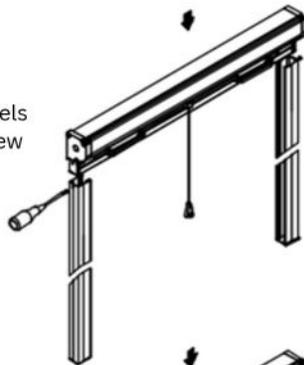


Assembly is now completed

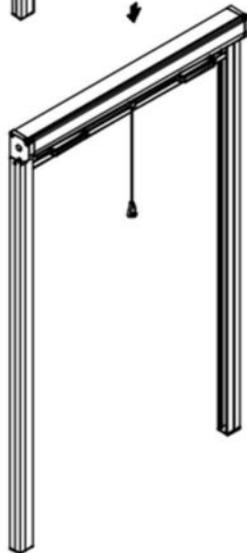

Install

Inside fit - RECESS


Drill through side channels if not pre drilled.
Screw to frame using appropriate screws.

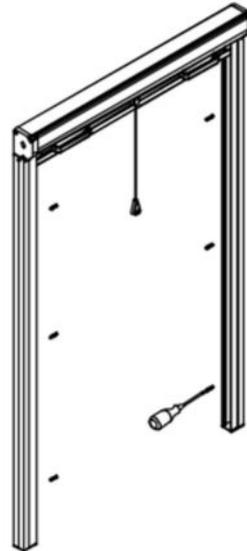

* Wooden screws are supplied.
For aluminium, concrete, gip or brick use appropriate screws and anchors which are not supplied.

Outside fitt - EXACT

Drill through face of side channels if not pre drilled.
Screw to frame using appropriate screws.

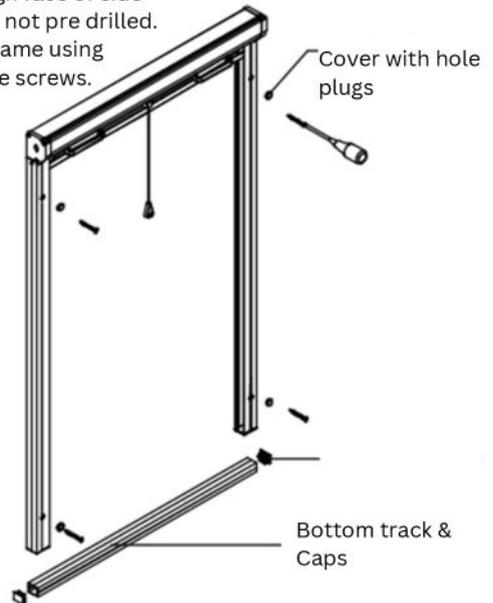

* Bottom track & Caps can be supplied for Outside fit installations.

scan to chat

