


## Inside Frame - Recess

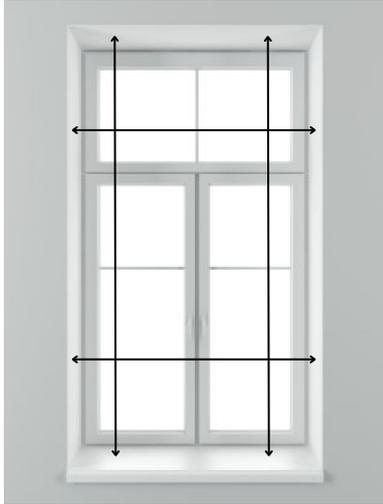


Check if depth of the Frame Recess is enough to accommodate the screen cassette and tracks. [Refer to system Diagram.](#)

Check for any obstructions like handles or locks.

Measure the **Width** in at least two points and use the smallest dimension.

Measure the **Drop** in at least two points and use the smallest dimension.

## Outside Frame - Exact

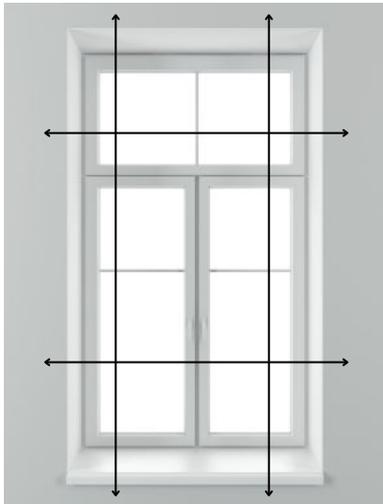

On an outside measurement take into account the cassette and tracks dimensions. Tracks and cassette should be placed on an even surface and without overlapping the frame recess for optimal finish.

It may be possible to install on the window trim as long as the window trim is wide enough for the tracks, cassette and bottom track when one is selected. [Refer to system diagram.](#)

If a window trim exists but not wide enough installation may still be possible using packers for stability.

Measure the **Width**.

Measure the **Drop**.

\*These instructions are for the most common possible ways to measure and if unsure contact us for advice.

scan to chat

